

My Dell ins15 3000 series lap wont bootup plz help

Posted by delladmin - 29 Dec 2016 05:04

You have to reset the BIOS, open the laptop and pull the CMOS battery. It may work by removing the battery and wall power and holding in the power button for about 30 seconds.

As long as you did not actually kill the video chip or motherboard.

=====