

black screen and flashing volume buttons on dell

Posted by admin - 30 Jun 2012 18:05

black screen and flashing volume buttons on dell studio 1537

Hello, I've got a Dell Studio 1537 laptop. My problem is that when I switch on the power button, the screen stay black and volume up and down buttons flases and the mute button gets white color. I proved to remove the ram memory, the hard drive and the bios battery, but everything is the same. What can I do? Thanks for your answers

=====